

Over the years, we've received a number of helpful tips from customers who were installing our trampolines that made the set up and installation process significantly easier. Here are a few tips to that we fully endorse that you might find especially helpful. We strongly encourage you to read these over BEFORE unpacking your trampoline and during installation. They may save you a lot of time and frustration!

Putting the frame together:

One part of assembly where people often have difficulty is during frame assembly. It is very important that extra care be taken when assembling the frame because a mistake at this stage will likely require uninstalling much of the trampoline and restarting. The first thing to note is that the frame will be somewhat loose after it is assembled. This is completely normal. Once you start inserting the mat and mat rods, the frame will become tight and rigid. A second important thing to watch for is the placement of the center posts in the legs. It is EXTREMELY important that you ensure that the frame is properly resting in the saddle of each of the center posts before Step 13. If one of the center posts is not properly installed, the frame integrity will be compromised and you will be forced to uninstall the mat rods before resetting the center post. Before moving to Step 14, stop and double check again that the center posts are correctly installed.






Extra Tip: Use the tools provided or manual tools such as a socket wrench to fasten the bolts on the trampoline frames or legs. Do not use a power driver, torque wrench, or drill as these may over tighten the bolts. Only do the bolts up snugly, there is no need to do them up really tight. If you are having trouble inserting the main frame bolts, try and move the frame to a slightly flatter location, as assembling the trampoline on unlevel ground can make this difficult.

Extra Tip: During installation, it may appear as though the center posts do not fit properly or the frame may not sit easily into the saddle of the center posts. Once you start installing mat rods, the frame will become more rigid and the center posts will fit into place. Remember to frequently check that the frame is properly seated in the saddles of all of the center posts to avoid having to uninstall any of the mat rods.

Setting the net around the frame:

When you get to Step 8 and 9, you need to be extra careful that you don't install the net inside out. When placing the net around the frame, it is helpful to imagine how it will look once it is fully assembled – the text on the tab under the door and the pockets at the top of the net should be facing out once the net is up. If you lay the net around the frame with this perspective in mind, it will be much easier. Then, after inserting the first couple of rods through the net into the frame, it is a good idea to try lifting the top band of the net (the thin strip around the top of the net where the pockets are) up high enough to ensure you've got it right. Ensure you have the enclosure net door located in the correct position and the right way around, i.e. not inside out


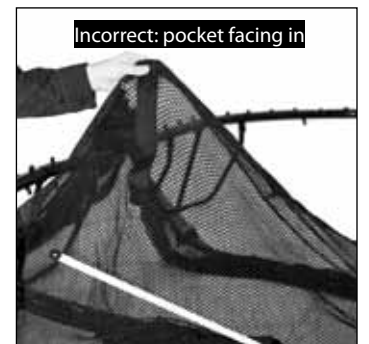
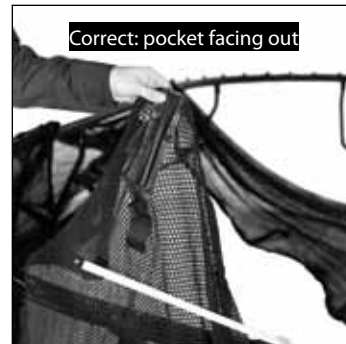
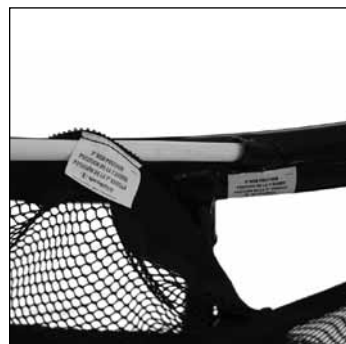


Extra Tip: Go around the trampoline and make sure the net is not stuck under the leg center posts before attaching the mat.

Installing the rods – following a different sequence:

Depending on the version of manual you have, you may need to take a different approach to Step 12. If you have version 1.1, just follow the instructions as outlined. If you have version 1.0, Step 12 asks that you install every fifth rod after the "1st Rod Position." While following this sequence does work, it requires much less effort if you do the following:

1. Choose a rod in a mat edge socket along a straight section with the sticker "1st rod position." Connect the ball end of this rod to the mat edge socket in the mat marked with a label "1st rod position" (Figure 1).
2. Working from right to left, count five empty mat edge sockets in the edge of the mat. Mount the sixth. Continue from right to left around the mat to the next "1st rod position" (located in the center of the next straight section) and from there count five empty mat edge sockets and then mount the sixth. Repeat for the remaining "1st rod positions." You should now have five attached mat rods (Figure 2).
3. Next, working from the attached rod to the left of the original "1st rod position" (the second rod you attached), count seven empty mat edge sockets. Mount the eighth. Continue around the trampoline from right to left mounting the eighth rod after the next three attached rods. You should now have 9 attached mat rods (Figure 3).
4. Now, locate the remaining 3 mat rods with the sticker "1st rod position" and connect them to the corresponding mat edge socket (Figure 4).
5. Next, install one more rod to the left of each group, while circling the trampoline. Continue to circle around the trampoline installing one rod per group until all rods are connected.

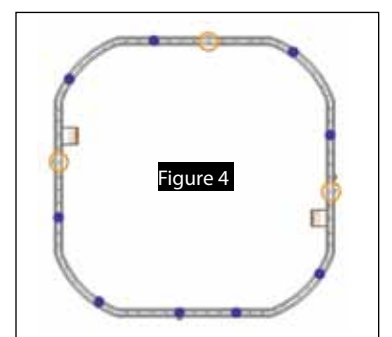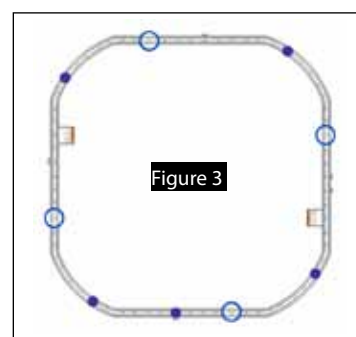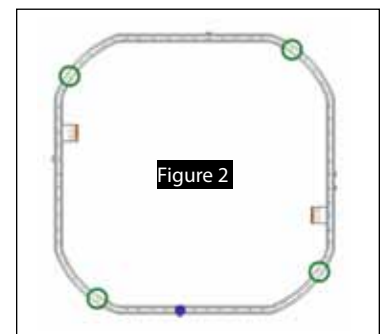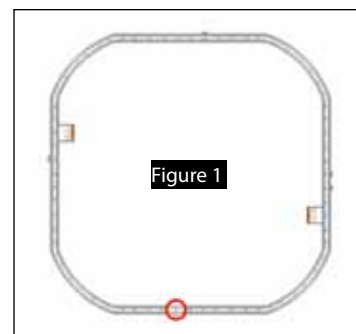

Installing the rods – how to get the rods into the mat edge sockets:

Use the correct technique to insert the rods, use your body weight to apply tension to the rods not muscle strength. Push the rod in with your right hand, palm facing up, and with your elbow tucked in against your right hip, while holding the mat edge socket level with the left hand. With your left foot forward, lean the weight of your torso against the rod to bend it into position. This method uses your body weight to flex the rods (rather than pure arm strength), and it also keeps your face away from the loaded rods.

It is easiest to mount the rod ball to the mat edge socket by pushing the rod in and up towards the mat, while holding the mat edge socket level. The ball then pushes back naturally into the mat edge socket (some rods will need to be flexed a long way at first).

Extra Tip: You will likely find that some of the mat rods in the corners require more applied force in order to get them into the mat edge socket. If you find that the distance between the rods and the mat is too great, have a second person push on the already attached rods on the opposite corner of the trampoline. It is also helpful if they brace the frame on the opposite side to keep it from sliding while you are inserting the rods.



Pulling the net up over the mat after the rods are installed:

When you come to Step 15, you may find that it is quite difficult to slide the enclosure up over the mat. However, if you start in one corner and gently work the top edge of the net up and over the rods and mat, the rest of the enclosure should slide up relatively easy. The first corner of the enclosure may be fairly tight but if you ease it up from one end of the curved section to the other it should pop up over the edge. Be very careful that the net is not snagged on any of the bolts or enclosure rod sockets – if the net catches, it could result in a hole.

